

How to Add a User Code Bosch Alarm Panel:

1. Enter your Master Code, followed by [1] and the [#] button (for example, [25801#]). Three beeps are heard, and the STAY and AWAY indicators flash.
2. Enter the User Code number (1 to 32), followed by the [#] button (for example, [2#] = User 2, [8#] = User 8). Two beeps are heard, and the selected user number is displayed on the code pad indicators.
3. Enter the digits required for the new code followed by the [#] button (for example, for User Code 5768, enter [5768#]). Two beeps are heard, and the STAY and AWAY indicators are turned off. To add or change other User Codes, repeat this procedure as many times as required.

How to Program the Date and Time:

1. Enter your Master Code, followed by [6] and the [#] key (for example, [25806#]). Three beeps sound, and the STAY and AWAY indicators flash.
2. Enter the day, month, year, hour, and minute (DD, MM, YY, HH, MM format) (for example, DD = day of the month, MM = month of the year, YY = current year, HH = hour of the day, MM = minute of the day). To program the hour of the day, use the 24:00 hour format.
3. Press the [#] button to exit and return to the disarmed state. Two beeps sound, and the STAY and AWAY indicators turn off. If a long beep sounds, an error is made when entering the date and time.

How to Determine the Type of System Fault:

1. Hold down the [5] key until two beeps sound. The FAULT indicator remains steady, and the STAY and AWAY indicators flash in unison. A zone indicator displays the type of fault that occurred (for example, Zone 1 = System Fault). Refer to Fault Indicators, page 20, for possible system faults.
2. To further determine the type of fault condition, press and hold down the key that corresponds to the zone indicator displayed. For example, if Zone 1 displayed System Fault, press and hold the [1] key to display which system fault occurred.
3. To exit Fault Analysis Mode and return to the disarmed state, press the [#] key. The FAULT indicator continues to display, and the code pad stops sounding once a minute.

The door keypads Code programming:

Enrolling Codes into Memory Slots Press #, #, 2, 6, 2, 4, 7, x, x, x, (Enter New 4 Digit Code)
, #, #. – [x, x, x = Memory Location 001 – 500]